

# BJARG

Thank you for purchasing our product.

Read the manual before assembling and using the chair.

This is a standard assembly instructions for a not assembled version.

The methods of assembly and use depend on the options you have selected for the product.


All the pictures included in the manual are purely illustrative.

## Optionally

Headrest




Armrests

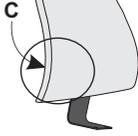


## Assembly manual

I

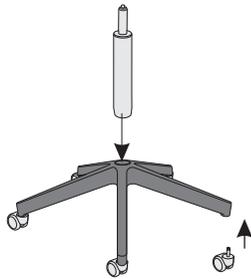

**Note:** For soft floors, use H-type castors with hard rolls (one-coloured).  
For hard floors, use W-type castors with soft rolls (two-coloured).


II

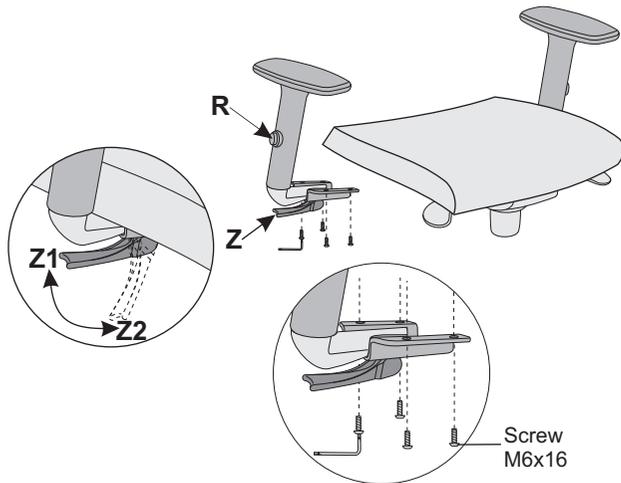

**R35K2-SB2**  
**R35K3-SB2**




II

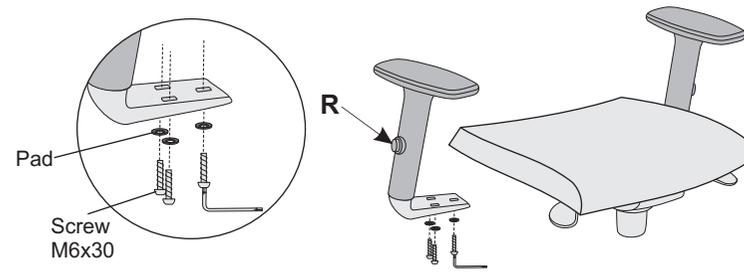


**R35K2**  
**R35K3**

III

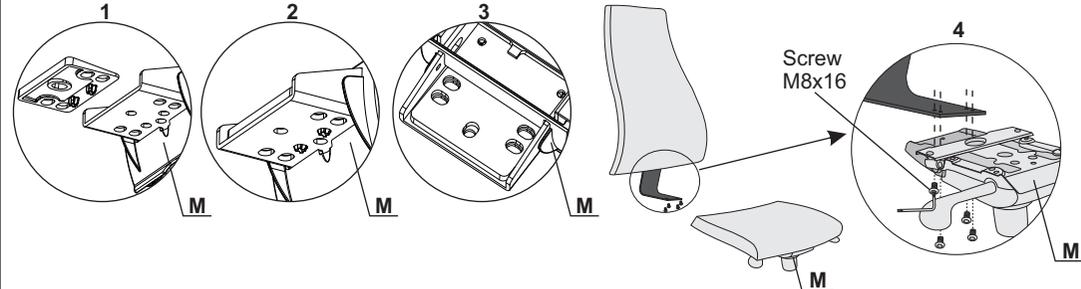

**FS, FST, ER, ERT, ERTN, EAST**

III

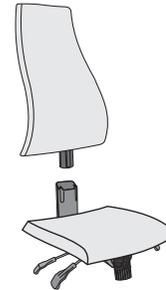

**SYNCROIBRA-TR**

IV




## Adjustment range

- Back and forth sliding armrest's pads (only R35K3-SB2, R35K3).
- The arm height adjustment - R.
- The armrest's width adjustment - press Z lever:
- Z1** - Locked
- Z2** - Unlocked (only R35K2-SB2, R35K3-SB2).


- The backrest height adjustment:  
The backrest returns to the lowest position, once the highest position is passed. In order to adjust the backrest to your desired position first slide the backrest fully up and let itself to slide down, then gradually move up the backrest to the required position.
- Headrest angle adjustment, headrest height adjustment (HRUA).
- Lumbar support depth adjustment - C (LSD2).

## FS/FST

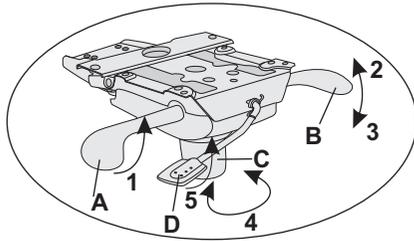


- A1** - Gas height adjustment
- B2** - Free floating
- B3** - Mechanism in locked position
- C4** - Tension adjustment knob
- D5** - Seat depth adjustment

## ER/ERT/ERTN

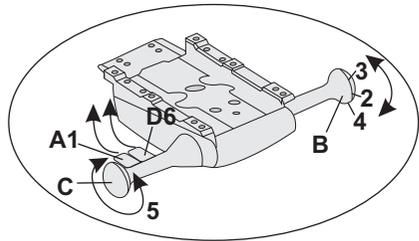



- A1** - Gas height adjustment
- B2** - Free floating
- B3** - Mechanism in locked position
- B4** - Angle regulation of the seat up front. To tilt the seat up front you need to turn the knob **B** to position **4** and push the back onto the backrest once. To block the seat in this position you need to turn the knob **B** to position **2**. Returning the seat to neutral position: turn the knob **B** to position **4** and push your back onto the backrest once, turn the knob **B** to position **2** and push onto the backrest until you hear the 'click' sound
- C5** - Tension adjustment knob
- D6** - Seat depth adjustment

## EAST

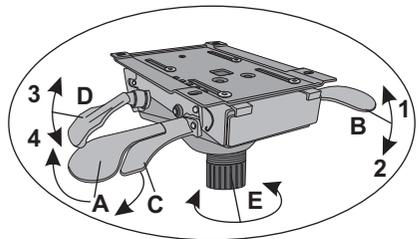

- A** - Gas height adjustment
- B1** - Free floating
- B2** - Mechanism in locked position
- C** - Seat depth adjustment
- D3** - The angle of the seat (unlocked position)
- D4** - The angle of the seat (locked position)
- E** - Tension adjustment knob

## SYNCROIBRA TR

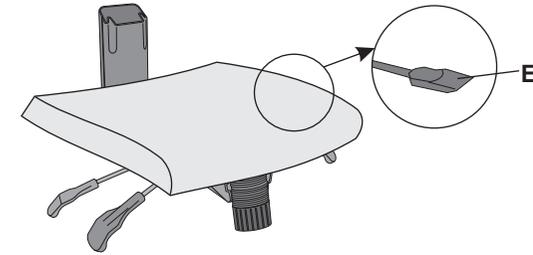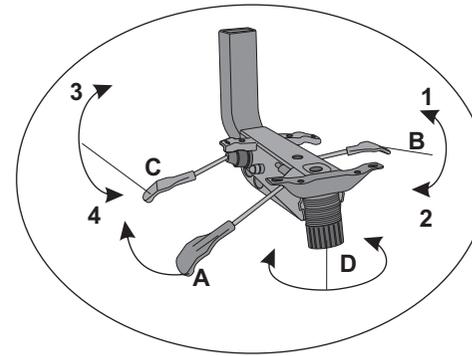

### Locking procedure:

- A) Find the desired position
- B) Push the left lever downwards

### Unlocking procedure:

- A) Pull the left lever upwards
- B) Give pressure to the backrest

- A** - Gas height adjustment
- B1** - Seat and back free floating
- B2** - Seat and back in locked position
- C3** - Back free floating
- C4** - Back in locked position
- D** - Tension adjustment knob
- E** - Seat depth adjustment

We remind you that the chair should be used for its intended purpose.  
 The chair is designed for one person.  
 You must not stand on the chair or use it to transport heavy objects.  
 You should not leave the chair in places with high humidity or next to heat sources.  
 The proper use will ensure long-lasting and failure-free operation of the chair.  
 It is recommended to check the fastenings, such as knobs and screws, periodically.  
 To clean the dirty upholstery cover, use the cleaning agents designed for upholstered furniture.  
 Plastic parts should be cleaned with widely available non-scratching cleaning agents.

### NOTE!

The maximum chair load is 110 kg.  
 Disassembly of any chair components may result in a loss of warranty.  
 The pneumatic lift cannot be heated or dismantled. Replace it as a whole if necessary.  
 The chair can be repaired or the chair components can be replaced only by trained staff.  
 More information related to our products can be found at our websites.